


AQUAPREP¹ PLUMBING DETAILS

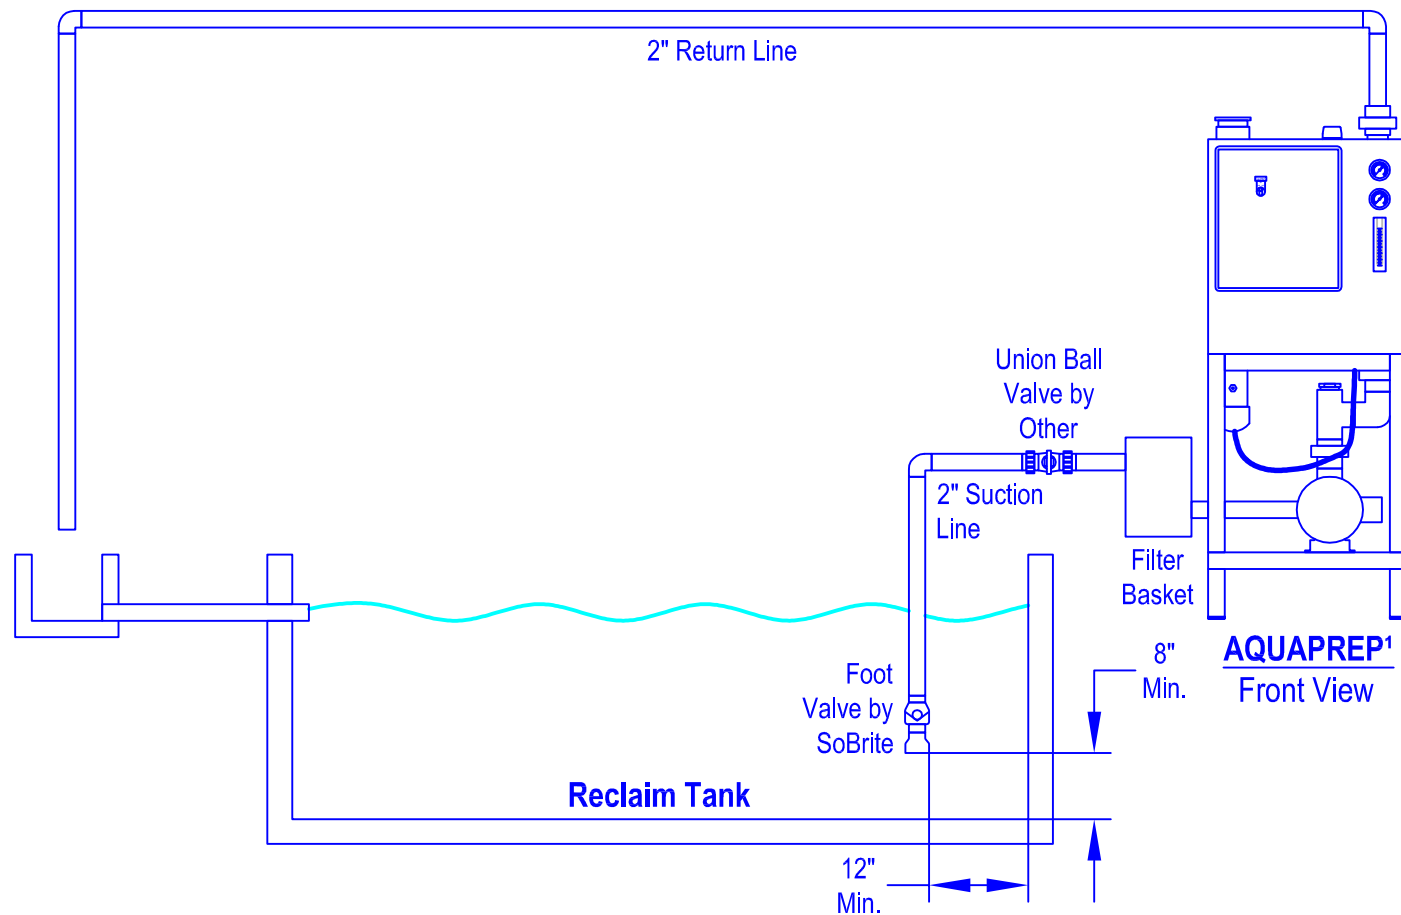

NOTES

- All lines & shut-off valves are sch 80 PVC pipe.
- Locate the unit so that the suction line from the reclaim tank is as short as possible.
- The suction line should be 2" in diameter with as few elbows as possible.
- Make sure that there are no leaks in the line.
- Avoid using PVC male thread adapters. Always use a female thread adapter & a pipe nipple.
- Use the foot valve (check valve) provided.
- Locate the strainer basket for the suction line in a place that is accessible for cleaning.
- The return line to the pit should be 2" in diameter with as few bends or restrictions as possible.
The injectors will not work with a restricted discharge.
- If discharge line is more than 20' long, consult SoBrite for proper size.