



FILTERMATIC 3B ELECTRICAL CONNECTIONS

Float Switch Placement - ALL FLOAT SWITCHES BY SOBRITE

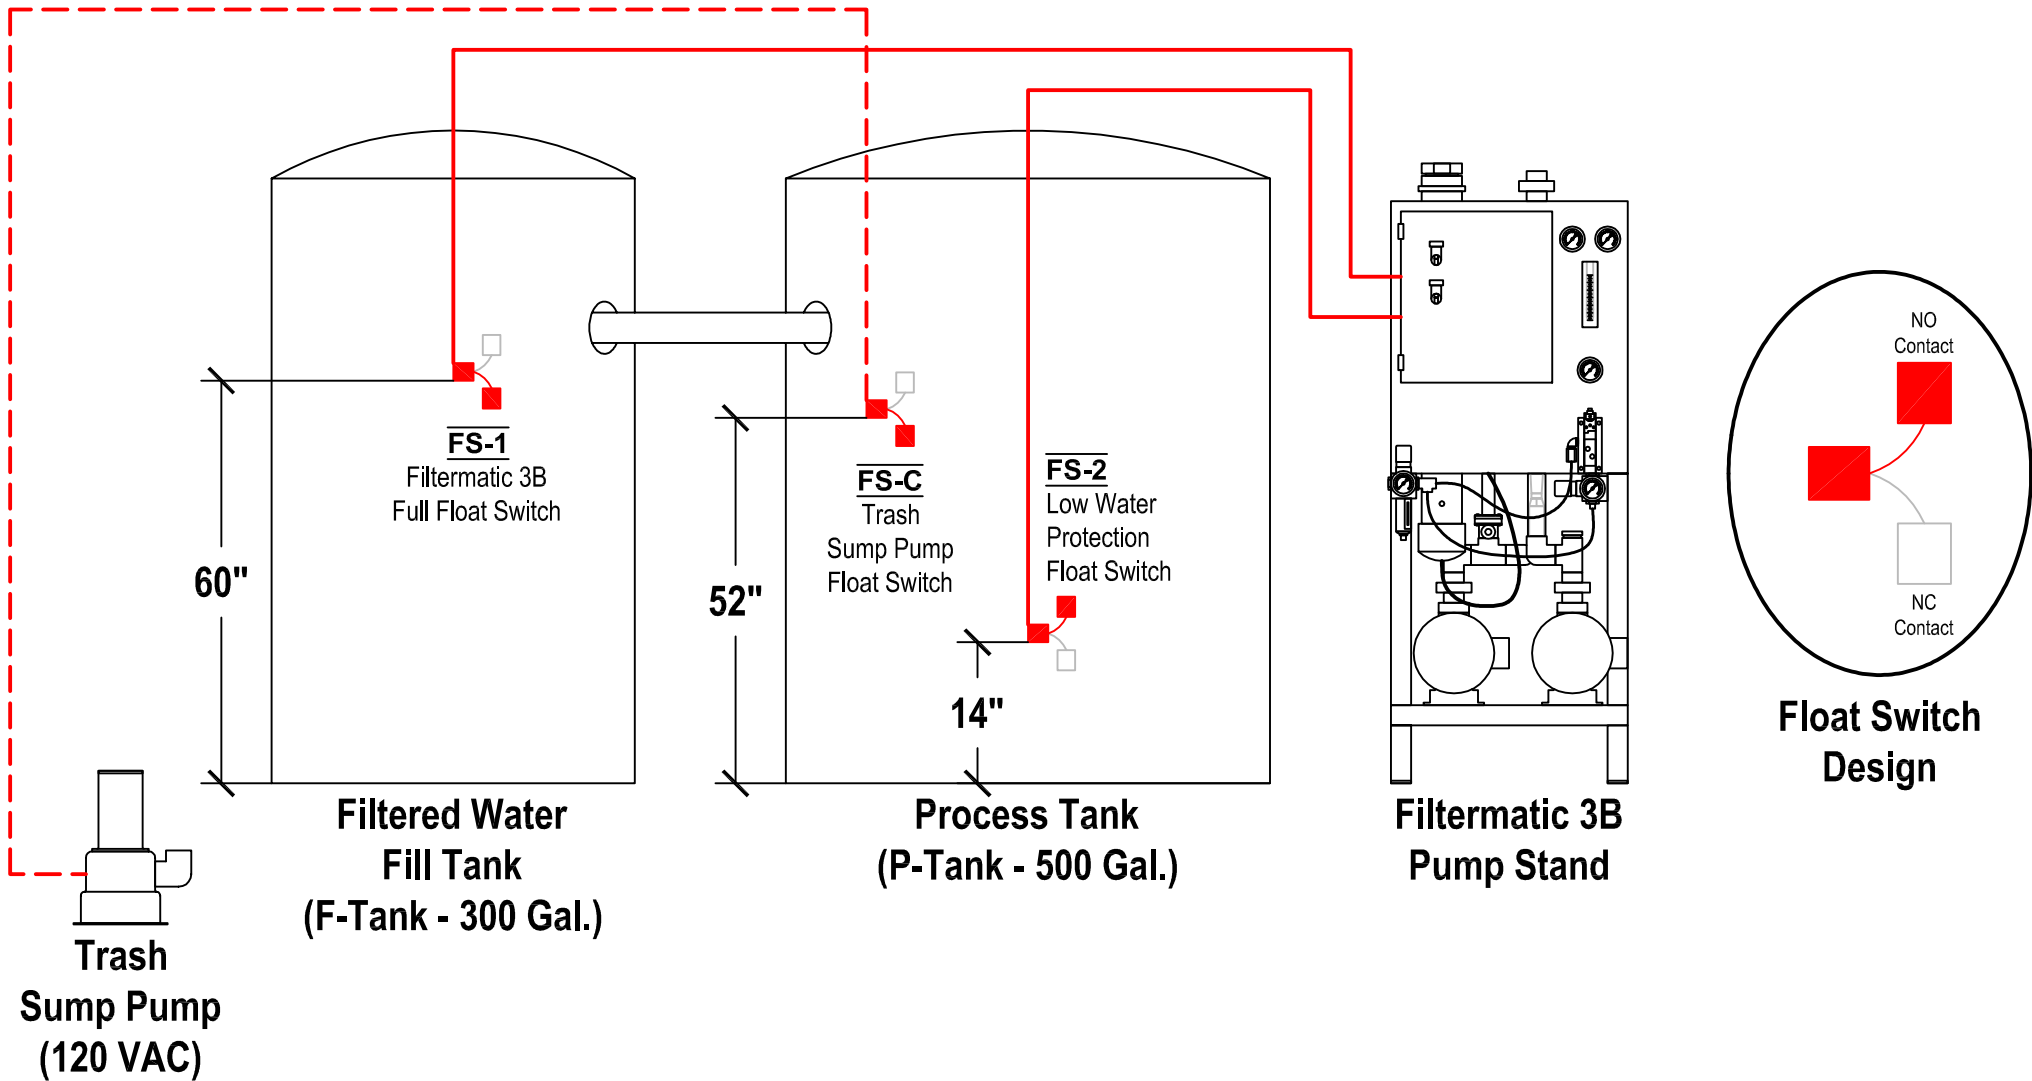




ELECTRICAL DETAILS

Filtermatic 3B System

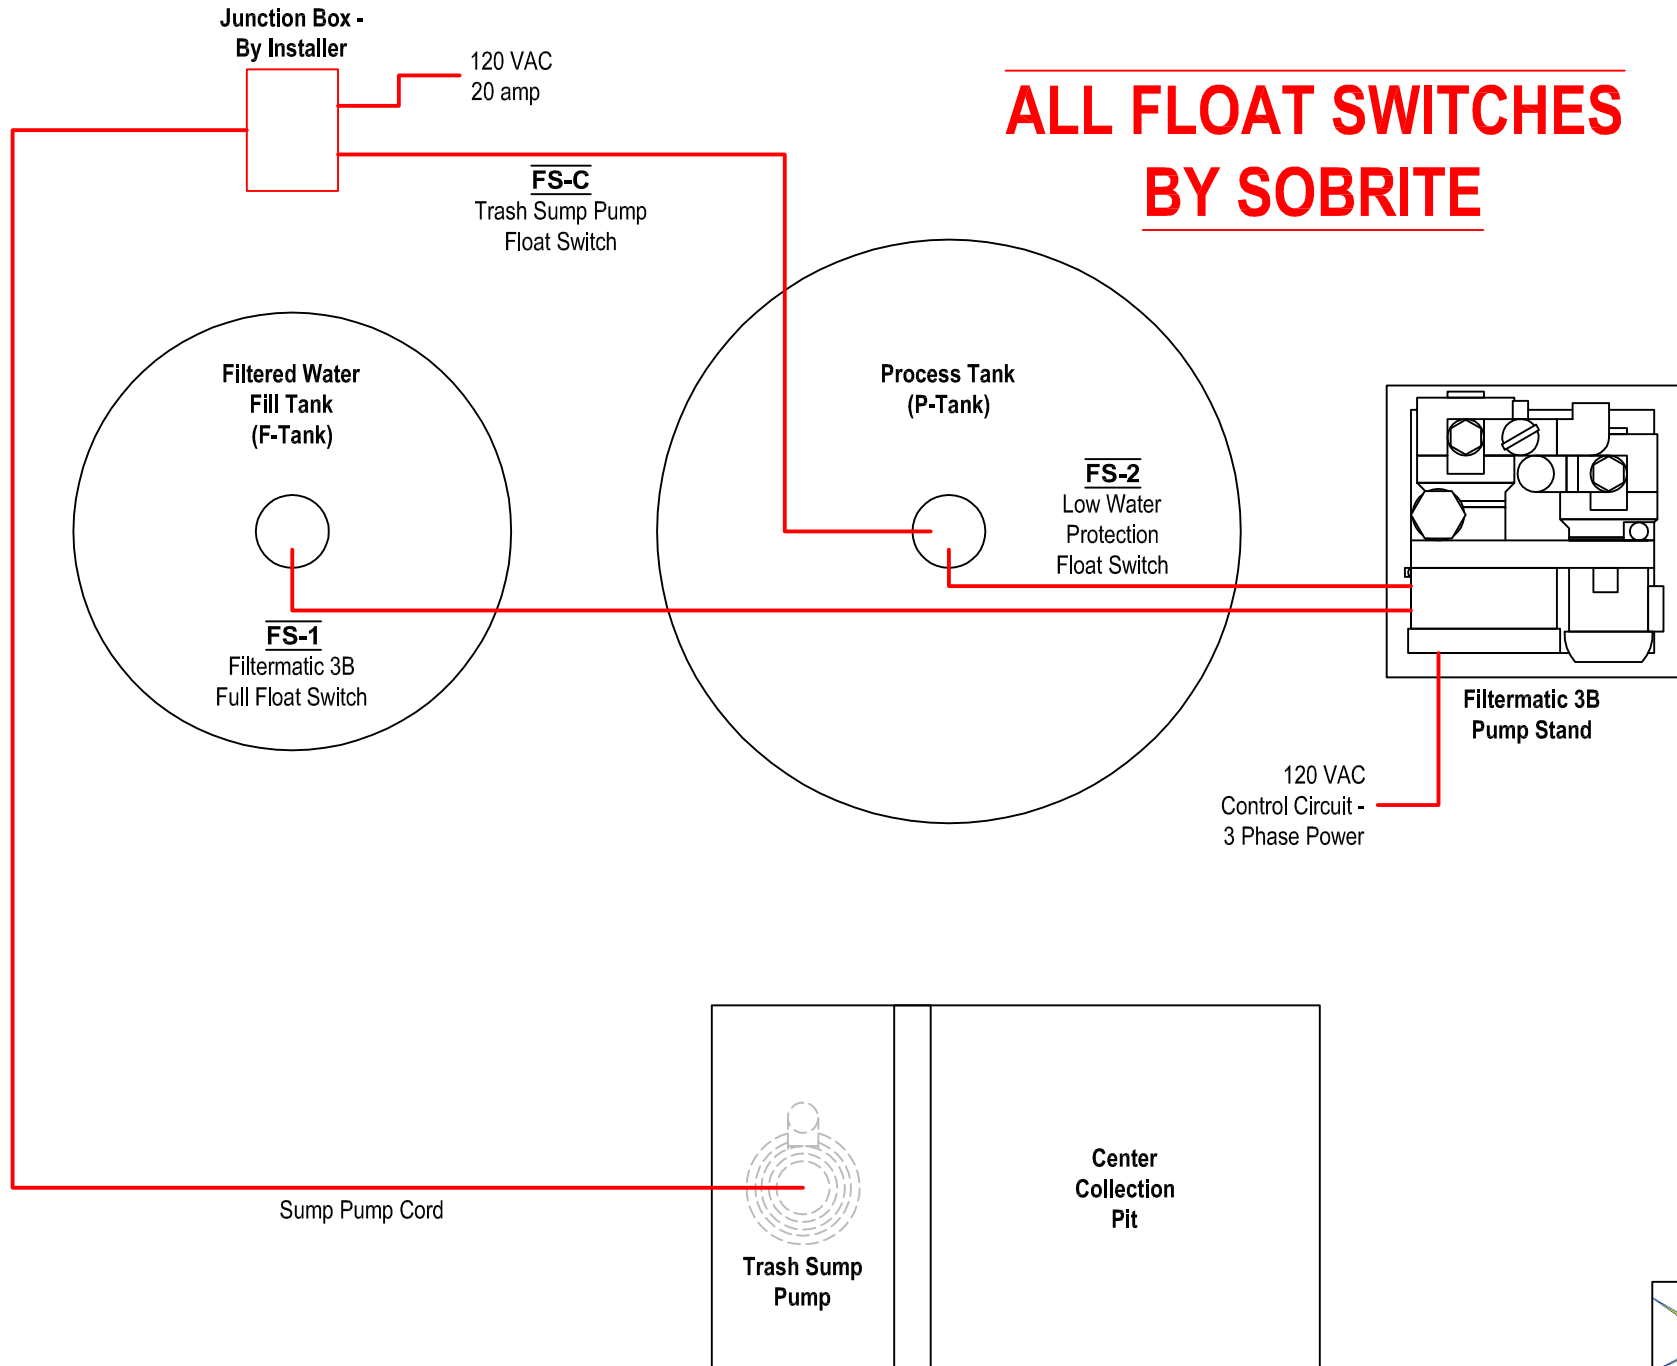



F-TANK & P-TANK

Plumbing Details - Crossover

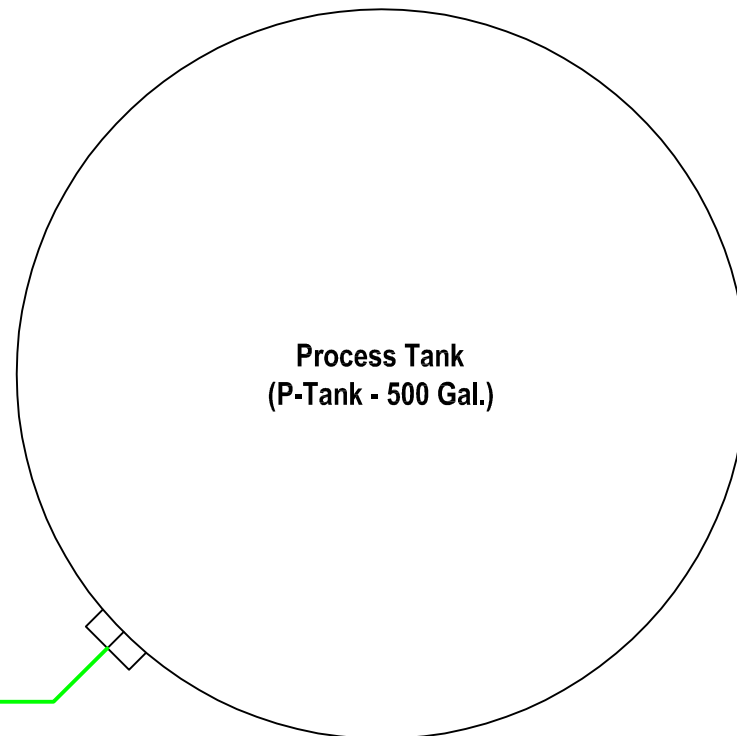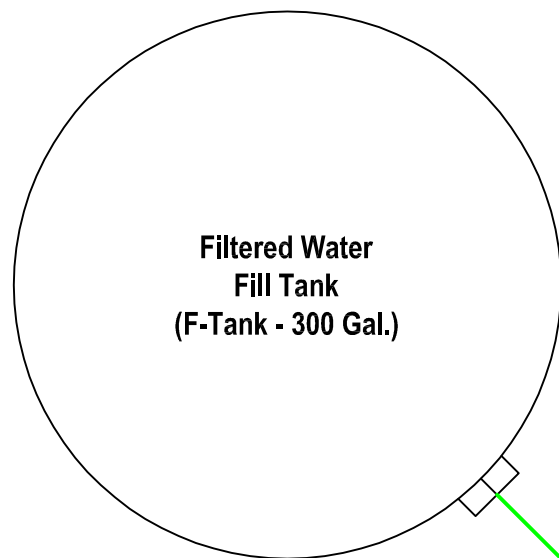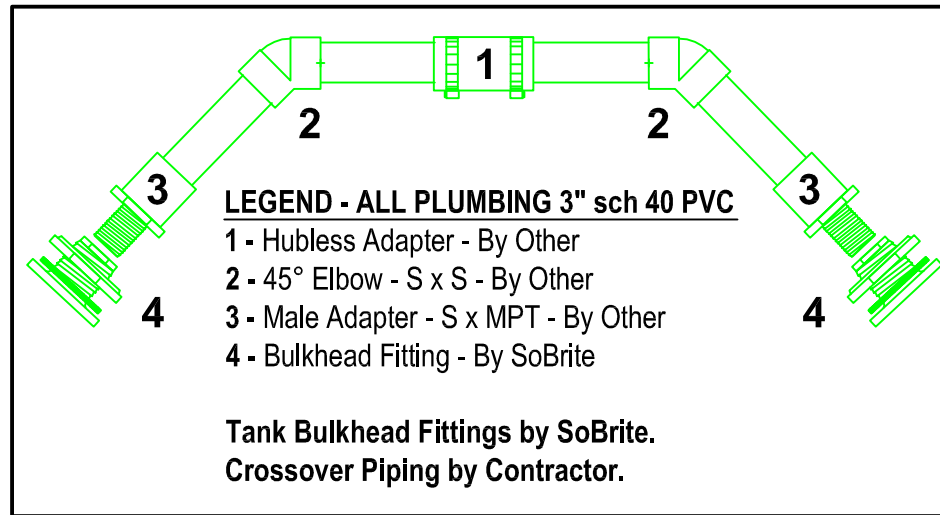


TANK CROSSOVER

Detail View

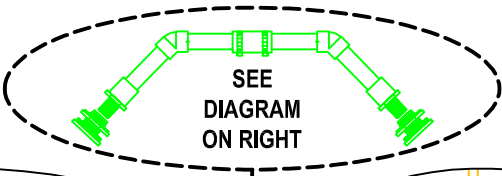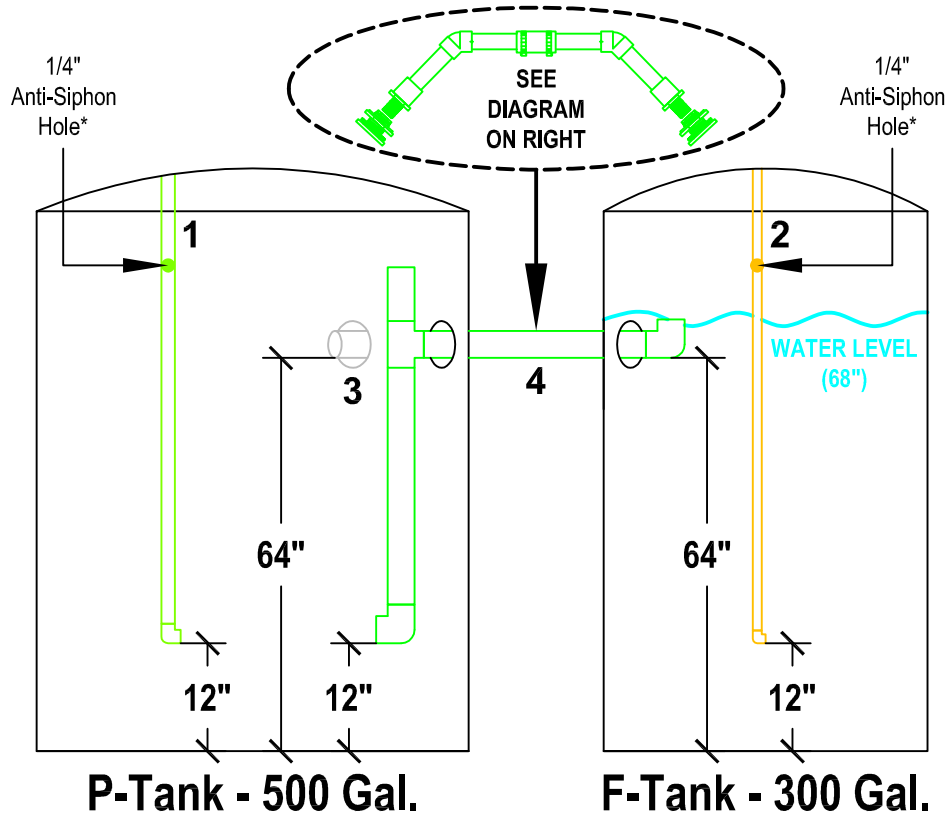

* Holes should be drilled in each discharge pipe at least 3" above tank water level. By plumber.

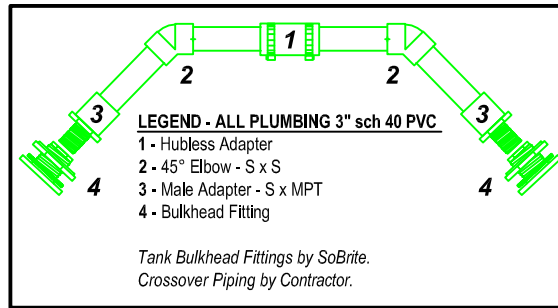

NO SCALE

TANK PLUMBING LEGEND

- 1 - 1 1/2" sch 80 PVC Pipe - AquaPrep Discharge Line - From 3B Unit to P-Tank *
- 2 - 1" sch 80 PVC Pipe - Media Tank Discharge Line - To F-Tank *
- 3 - 3" Bulkhead - FOR FUTURE USE - CAP CLOSED
- 4 - 3" sch 80 PVC Pipe - Crossover from F-Tank to P-Tank

* Water should circulate counter-clockwise in both tanks. Face elbows on crossover & discharge lines accordingly. DO NOT DIRECT DISCHARGE WATER TOWARDS SUCTION LINES.

Contents:
Plumbing
Details -
F-Tank &
P-Tank

Job:
TYPICAL

Customer:

File Name:
xx.dwg

Revisions

Date	Rev.	Drafter
02/23/17	0	JOS

SHEET
P6

SoBrite Technologies

809 W. Center St.
Eureka IL 61530

Phone: (309) 467-2335
Fax: (309) 467-2539

All information contained within this document is the exclusive property of SoBrite Technologies. Copyright 2017 ©

